

Переходники

Q-796  <i>гн.BNC ↔ 2гн.BNC</i>	Q-9276  <i>гн.BNC ↔ гн.BNC, на панель, изолированный</i>	Q-9446  <i>гн.BNC ↔ гн.BNC</i>	Q-964  <i>шм.BNC ↔ гн.F</i>
Q-1471  <i>гн.BNC ↔ гн.F</i>	Q-603  <i>шм.BNC ↔ шм.F</i>	Q-912  <i>шм.BNC ↔ гн.FME</i>	Q-2971  <i>шм.BNC ↔ шм.FME</i>
Q-9193  <i>гн.BNC ↔ гн.FME</i>	Q-540  <i>шм.BNC ↔ шм.N</i>	Q-2900  <i>шм.BNC ↔ гн.N</i>	Q-501  <i>гн.BNC ↔ шм.N</i>
Q-552  <i>гн.BNC ↔ гн.N</i>	Q-9  <i>шм.BNC ↔ гн.RCA</i>	Q-1427  <i>шм.BNC ↔ шм.SMA</i>	Q-9094  <i>гн.BNC ↔ гн.SMA</i>
Q-10177  <i>шм.BNC ↔ гн.SMA</i>	Q-560  <i>гн.BNC ↔ шм.SMA</i>	Q-505  <i>гн.BNC ↔ шм.TNC</i>	Q-547  <i>шм.BNC ↔ шм.TNC</i>
Q-548  <i>шм.BNC ↔ гн.TNC</i>	Q-558  <i>гн.BNC ↔ гн.TNC</i>	Q-1125  <i>шм.BNC ↔ гн.TV</i>	Q-2915  <i>гн.BNC ↔ шм.TV</i>
Q-380  <i>шм.BNC ↔ гн.mini-UHF</i>	Q-1887  <i>гн.BNC ↔ шм.mini-UHF</i>	Q-537  <i>шм.BNC ↔ шм.UHF</i>	Q-529  <i>шм.BNC ↔ гн.UHF</i>
Q-537  <i>шм.BNC ↔ шм.UHF</i>	Q-591  <i>гн.BNC ↔ шм.UHF</i>	Q-542  <i>гн.BNC ↔ гн.UHF</i>	Q-2616  <i>шм.BNC ↔ клемма приборная, Ø6</i>
Q-2454  <i>шм.BNC ↔ держ. антен.</i>	Q-2800  <i>гн.BNC ↔ шм.2,5моно</i>	Q-1588  <i>гн.BNC ↔ шм.3,5МОНО</i>	Q-10184  <i>шм.F ↔ гн.BNC</i>