

---

## Пульт дистанционного управления универсальный

**ДУ-14 Е**

TYPE: D007A001

**TOSHIBA**



### Описание:

Заменяет пульты ДУ Toshiba:

CT-7160; CT-7180; CT-90013; CT-90014;  
CT-90046; CT-90119; CT-9012; CT-90166;  
CT-90163; CT-9128; CT-9185; CT-9186;  
CT-9193; CT-9199; CT-9207; CT-9289;  
CT-9292; CT-9293; CT-9335; CT-9340;  
CT-9347; CT-9359; CT-9369; CT-9381;  
CT-9396; CT-9430; CT-9450; CT-9463;  
CT-9476; CT-9478; CT-9487; CT-9493;  
CT-9507; CT-9510; CT-9511; CT-9545;  
CT-9565; CT-9573; CT-9576; CT-9584;  
CT-9596; CT-9599; CT-9619; CT-9621;  
CT-9623; CT-9626; CT-9630; CT-9632;  
CT-9642; CT-9643; CT-9640; CT-9665;  
CT-9673; CT-9678; CT-9684; CT-9687;  
CT-9708; CT-9712; CT-9730; CT-9731;  
CT-9734; CT-9736; CT-9737; CT-9760;  
CT-9777; CT-9778; CT-9782; CT-9784;  
CT-9785; CT-9787; CT-9801; CT-9818;  
CT-9840; CT-9843; CT-9844; CT-9851;  
CT-9852; CT-9856; CT-9858; CT-9859;  
CT-9875; CT-9878; CT-9879; CT-9880;  
CT-9881; CT-9911S; CT-9914; CT-9922;  
CT-9931; CT-9932; CT-9942; CT-9944;  
CT-9968; CT-9975; CT-9992; CT-9995;  
CT-9969;