

## Переходники

<b>Q-1130</b>  гн.SMA ↔ шм.TNC	<b>Q-1888</b>  шм.SMA ↔ шм.mini UHF	<b>Q-1889</b>  шм.SMA ↔ гн.mini UHF	<b>Q-2917</b>  гн.SMA ↔ шм.mini UHF
<b>Q-1422</b>  гн.SMA ↔ гн.mini-UHF	<b>Q-1498</b>  шм.SMA ↔ шм.UHF	<b>Q-551</b>  шм.SMA ↔ гн.UHF	<b>Q-1421</b>  гн.SMA ↔ шм.UHF
<b>Q-9339</b>  гн.SMA ↔ гн.UHF	<b>Q-10188</b>  шм.revers SMA ↔ гн.N	<b>Q-9118</b>  шм.SMB ↔ шм.SMB	<b>Q-9120</b>  гн.SMB ↔ гн.SMB
<b>Q-9119</b>  гн.SMB ↔ гн.SMB	<b>Q-1414</b>  шм.TNC ↔ гн.TNC	<b>Q-9246</b>  гн.TNC ↔ гн.TNC	<b>Q-9447</b>  гн.TNC ↔ гн.TNC
<b>Q-507</b>  шм.TNC ↔ 2гн.TNC	<b>Q-2666</b>  шм.TNC ↔ гн.FME	<b>Q-1189</b>  гн.TNC ↔ шм.N	<b>Q-2973</b>  гн.TNC ↔ шм.NEC
<b>Q-2894</b>  гн.TNC ↔ шм.SMA	<b>Q-9973</b>  гн.TNC ↔ шм.RCA	<b>Q-2591</b>  шм.TNC ↔ гн.mini-UHF	<b>Q-538</b>  шм.TNC ↔ шм.UHF
<b>Q-502</b>  шм.TNC ↔ гн.UHF	<b>Q-549</b>  гн.TNC ↔ гн.UHF	<b>Q-553</b>  гн.TNC ↔ шм.UHF	<b>Q-9296</b>  шм.RCA ↔ шм.TNC
<b>Q-544</b>  шм.UHF ↔ шм.UHF	<b>Q-9337</b>  шм.UHF ↔ шм.miniUHF	<b>Q-2455</b>  шм.UHF ↔ ант. держатель	<b>Q-1221</b>  шм.UHF ↔ гн.UHF
<b>Q-1220</b>  шм.UHF ↔ гн.UHF2	<b>Q-9169</b>  гн.UHF ↔ гн.UHF	<b>Q-1222</b>  гн.UHF ↔ гн.UHF2	<b>Q-9100</b>  гн.UHF ↔ шм.UHF с клеммой заземления